


CRB
CUSTOM ROD BUILDER

TAPE REAMER SET

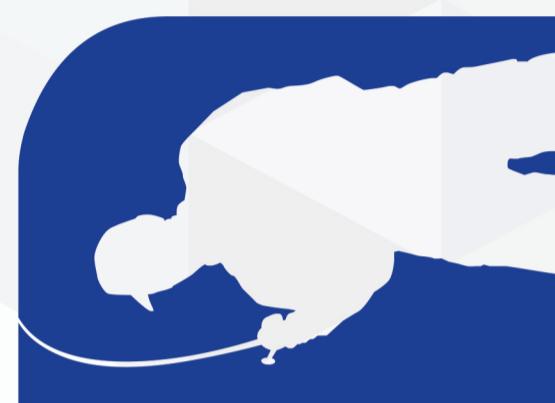

CRB

ROD

REAMER

CUSTOM ROD BUILDER

WWW.CRBPRODUCTS.COM



TAPE REAMER SET

These Tape Reamers feature a spiral wrapped grit-tape mounted onto a fiberglass tube.

Name	Length	Outside Diameter
TR-XS	16"	.200" - .250"
TR-S	16"	.255" - .315"
TR-M	16"	.300" - .350"
TR-MS	16"	.330" - .380"
TR-ML	16"	.360" - .405"
TR-L	16"	.410" - .480"
TR-XL	16"	.440" - .510"



DIRECTIONS

Begin by reaming the inside diameter of the cork grip to fit the blank using a reamer. Be careful not to ream out too much. Ideally, the cork should fit snugly over the blank. Once you achieve a snug inside diameter, apply epoxy glue to the rod blank and slide the grip down the blank and into position.



4 PRO REAMING TIPS

1. INCREASE YOUR REAMER SIZES SLOWLY

If you know the XL size is the last reamer size you need for a grip, start with the smallest reamer – even though it only takes off a small amount of cork material. Then go on to each size until desired size is reached.

2. MAKE SURE CORK RINGS HAVE COMPLETELY DRIED

For those rod builders who are creating a custom handle made up of cork rings, make sure that all the glue has completely dried before starting to ream it out.

3. USE MASKING TAPE FOR OVER-REAMED HANDLES

If you do happen to over ream your grip, don't panic. You can simply build up the area on your rod blank with masking tape. This is the same process used when centering a reel seat.

4. BE MINDFUL OF THE DUST

Reaming cork is messy! To avoid cork dust all over your rod during the build process, try reaming away from your workstation over a trash can. You can also incorporate a shop vac to clear dust as it is created.

WWW.CRBPRODUCTS.COM



MADE IN CHINA